

TELEPHONE FEATURES

CALL FORWARD WITH ITE-4 AND STE

To forward a call:

- 1** Lift the handset.
- 2** You should hear the dial tone.
- 3** Press ***** **3** .
- 4** You should hear two beeps.
- 5** Dial the phone number to which calls are to be forwarded.
- 6** You should hear two beeps.
- 7** Hang up.

To cancel Call Forward:

- 1** Lift the handset.
- 2** You should hear the voice prompt, "Forward. Forward."
- 3** Press **#** **3** .
- 4** You should hear two beeps.
- 5** Hang up.