

TELEPHONE FEATURES

LAST NUMBER REDIAL WITH ITE-12+, 12S, 24, AND 30S

To redial the last external number dialed:

- 1** Press the switch hook.
- 2** You should hear the dial tone.
- 3** Press **LAST #
REDL**.
- 4** The last external number dialed should be redialed.